








 

 



 

 





















 



 

 



 

 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------|
|  | Power |  | Power |
|  | Time |  | AV |
|  | Mute |  | Mute |
|  | Open/Close |  | Eject |
|  | OSD |  | Red |
|  | Video |  | Green |
|  | Angle |  | Yellow |
|  | Language |  | Dual |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------------|
|  | 0/10 |  | 0 |
|  | 10+ |  | Guide |
|  | Step |  | Media |
|  | Program |  | Sleep |
|  | Title |  | Info |
|  | Subtitle |  | Subt |
|  | Return |  | Back |
|  | Setup |  | Options |
|  | Clear |  | Exit |
|  | Slow |  | List |
|  | Zoom |  | Shift + Eject |
|  | Menu |  | Menu |
|  | A-B |  | 3D |
|  | Repeat |  | Text |
|  | Random |  | Blue |
|  | PBC |  | Smart |
|  | Play |  | Play |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|--------|
| | Stop | | Stop |
| | Pause | | Pause |
| | I<< | | I<< |
| | >>I | | >>I |
| | << | | << |
| | >> | | >> |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | Enter | | Ok |
| | Volume+ | | Vol + |
| | Volume- | | Vol - |
| | L/R | | Format |
| | N/P | | TV/R |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

