 



 



 

 



 

 

 

 



 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/Rad		TV/Radio /
	Mute		Mute / Dimmer
	TV/SAT		AV / Input / RDS
	Edit		Sound / Title
	Sleep		Sleep / Timer
	Mosaic		D.Menu / Top
	Freeze		Shift + Pause / Step /
	Zoom		Zoom / Size
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	FAV		Fav / Marker / PC
	Audio		Audio / Lang / I/II
	A-Z		Eject / Surround
	USB		Shift + 8
	Text		Text / Goto
	Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	SAT		Shift + 0
	SAT		Display / Media
	Vol-		Vol-
	Left / V-		Left
	OK		OK
	Right / V+		Right
	Recall		Back / Return
	Down / CH-		CH- / Page-
	Down / CH-		Down
	File List		Smart / List
	Play		Play / Slow
	Stop		Stop / Hold



