



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | AV/Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | Exit |  | Exit / Cancel / Clear |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | CH+ |  | CH+ / Page+ |
|  | [i]/Info |  | Info / Angle |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------------|
|  | Vol+ |  | Vol+ |
|  | CH- |  | CH- / Page- |
|  | I-II |  | Audio / Lang I/II |
|  | Vol- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK/Select |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | TV/DTV |  | TV/Radio / |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | [≡]/Text |  | Text / Goto |
|  | [≡o] |  | Sleep / Timer |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|--------------------|
| | [≡+]/[X] | | << / Tune- |
| | [≡x]/[··] | | >> / Tune+ |
| | [.]/[*] | | l<< / Preset- |
| | [≡◆]/[+]/Wide | | Picture / Format |
| | [≡?] | | >>l / Preset+ |
| | [≡i]/Guide | | Guide / EPG / -/-- |
| | P<P/SWAP | | Fav / Marker / PC |
| | PP | | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

