











 

 

 

 

 



 


 




 




**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |                             |
|---|-----------|---|-----------------------------|
|    | Power     |    | Power                       |
|    | Red / ↑   |    | Red / Netflix / Search      |
|    | Green / ↓ |    | Green / APP / Repeat        |
|    | Yellow    |    | Yellow / YouTube / Repeat   |
|    | Blue      |    | Blue / Prime Video / Random |
|    | M         |    | Menu / Home                 |
|    | Return    |    | Back / Return               |
|    | Up        |    | Up                          |
|    | Left      |    | Left                        |
|    | OK        |    | OK                          |
|   | Right     |   | Right                       |
|  | Down      |  | Down                        |
|  | Source    |  | AV / Input / RDS            |
|  | Presets   |  | D.Menu / Top                |
|  | Info      |  | Info / Angle                |
|  | EPG       |  | Guide / EPG / -/-           |
|  | Vol+      |  | Vol+                        |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                           |
|---|--------|---|---------------------------|
|    | Mute   |    | Mute / Dimmer             |
|    | P+     |    | CH+ / Page+               |
|    | Vol-   |    | Vol-                      |
|    | P-     |    | CH- / Page-               |
|    | 1      |    | 1                         |
|    | 2      |    | 2                         |
|    | 3      |    | 3                         |
|    | 4      |    | 4                         |
|    | 5      |    | 5                         |
|    | 6      |    | 6                         |
|   | 7      |   | 7                         |
|  | 8      |  | 8                         |
|  | 9      |  | 9                         |
|  | FAV    |  | Shift + Fav / Marker / PC |
|  | 0      |  | 0                         |
|  | Recall |  | Fav / Marker / PC         |
|  | Screen |  | Picture / Format          |



