

**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Zoom+		Zoom / Size
	Setup		Setup / OPT /
	Sleep		Sleep / Timer
	Rotate		Back / Return
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Copy/Del		Smart / List
	Up		Up
	Enter		OK
	Down		Down
	Right		Right
	Left		Left
	Stop		Stop / Hold
	Slide Show		Display / Media

Originalfernbedienung Ersatzfernbedienung

