



 










 


 
 
 
 













 
 
 

 
 
 


 






 


 
 

 

 





 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Exit		Exit
	Menu		Menu
	TV/Radio		TV/R
	A/B		Smart
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	V+		Vol +
	Right		Right
	V-		Vol -
	Left		Left

**Originalfernbedienung Ersatzfernbedienung**

	OK		Ok
	EPG		Guide
	Info		Info
	Recall		Back
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide

