















 

 






 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Standby |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Rec |  | Rec / Rec Mode |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Language |  | Audio / Lang I/II |
|  | SUBT / RIP |  | Subtitle / EQ |
|  | Open / Close |  | Eject / Surround |
|  | Zoom |  | Zoom / Size |
|  | Time |  | Sleep / Timer |
|  | TV / Radio |  | TV/Radio / |
|  | Setup |  | Setup / OPT / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Title / TTX |  | Text / Goto |
|  | Source |  | AV / Input / RDS |
|  | Menu / PBC |  | Menu / Home |
|  | Up |  | Up |
|  | Left / Fav- |  | Left |
|  | Enter |  | OK |
|  | Right / Fav+ |  | Right |
|  | Clear |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | L/R |  | Smart / List |
|  | Vol- |  | Vol- |
|  | OSD |  | Display / Media |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |



