 







 
 

 



 

 

 

 

 

 



 



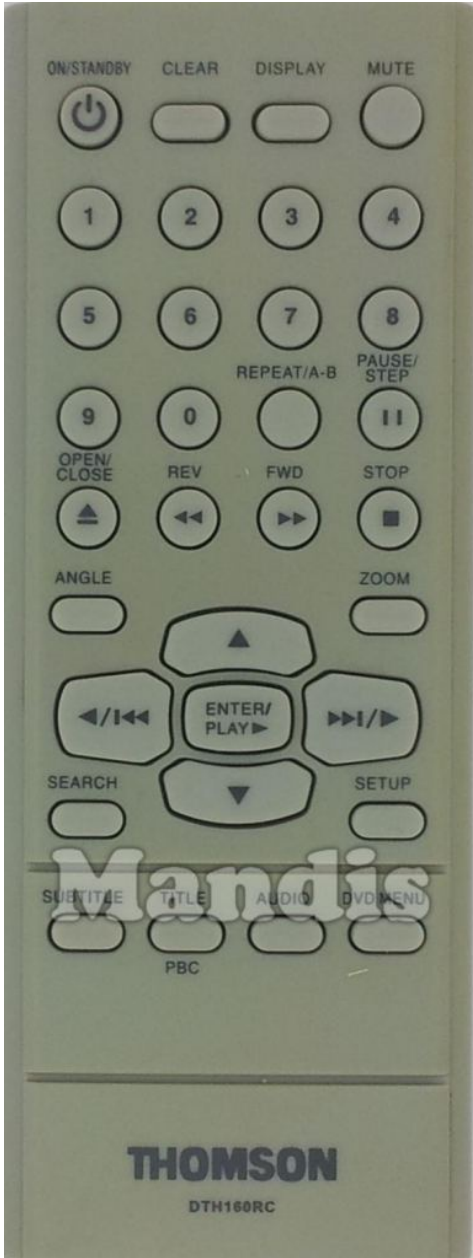




Originalfernbedienung	Ersatzfernbedienung
 On/Standby	 Power
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat/A-B	 Yellow / YouTube / Repeat
 Pause/Step	 Pause / Step / Freeze
 Open/Close	 Eject / Surround

Originalfernbedienung	Ersatzfernbedienung
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Up	 Up
 Left	 Left
 Left	 Left / Preset-
 Enter	 OK
 Play	 Play / Slow
 Right	 Right
 >>	 >> / Preset+
 Search	 Red / Netflix / Search
 Down	 Down
 Setup	 Setup / OPT /
 Subtitle	 Subtitle / EQ
 Title/PBC	 Sound / Title





Originalfernbedienung Ersatzfernbedienung

	Audio		Audio / Lang I/II
	DVD Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

