



Originalfernbedienung Ersatzfernbedienung

	Source	 + 	Shift + AV / Input / RDS
	Power		Power
	List		Smart / List
	TV	 + 	Shift + 1
	DVD	 + 	Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--	 + 	Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC



 

 











 

 

 







 





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Mute		Mute / Dimmer
	Red/O Lang		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung







 



 

 

 

 

 


 

 

 


 
 



 Red/O) Lang	 Audio / Lang I/II
 Green/Subtitles	 Subtitle / EQ
 Green/Subtitles	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet/Text	 Text / Goto
 Stop Text	 Shift + Stop /
 ??? Text	 Sleep / Timer
 Zoom Text	 Zoom / Size
 Media/Digital	 Display / Media
 <<<	 <<< / Tune-
 Play	 Play / Slow
 >>>	 >>> / Tune+
 T-Link	 D.Menu / Top
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung


 





 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		Shift + Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+ Tv		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol- Tv		Vol-
	PR-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Red(O) Lang		Audio / Lang I/II
	Red(O) Lang		Red / Netflix / Search
	Subtitles		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

 Green/Subtitles	 APP REPEAT	Green / APP / Repeat
 Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 Blue	 Prime Video RANDOM	Blue / Prime Video / Random
 Violet/Text	 GOTO TEXT	Text / Goto
 <<	 TUNE-	<< / Tune-
 Play	 SLOW	Play / Slow
 >>	 TUNE+	>> / Tune+
 Rec	 REC MODE	Rec / Rec Mode
 Stop	 HOLD	Stop / Hold
 Pause	 STEP-FREEZE	Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	Source / Eject		Eject / Surround
	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0 / --		Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	PR -		CH- / Page-
	Mute		Mute / Dimmer
	Red / A-B		Shift + Yellow / YouTube /
	Red / A-B		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Green / Subtitles		Green / APP / Repeat		
	Green / Subtitles		Subtitle / EQ		
	Yellow / Size		Yellow / YouTube / Repeat		
	Yellow / Size		Zoom / Size		
	Blue / Lang		Blue / Prime Video / Random		
	Blue / Lang		Audio / Lang I/II		
	Purple / Text		Text / Goto		
	Text Stop		Shift +		Stop /
	Text ???		Sleep / Timer		
	Text Zoom		Shift +		Zoom /
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		

