 



 

 

 


 

 



 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------|
|  | On |  | Power |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Record |  | Rec |
|  | Open/Close |  | Eject |
|  | Disc Skip |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | EQ |  | Red |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------|
|  | B.Boost |  | Green |
|  | Band |  | Yellow |
|  | FM ST |  | Blue |
|  | Source |  | AV |
|  | CD Info |  | Info |
|  | Prog |  | Shift + Sleep |
|  | Intro/CT |  | Ok |
|  | Repeat/RDS |  | Text |
|  | PTY |  | Media |
|  | ADD |  | Dual |
|  | DEL |  | Exit |
|  | Clock |  | Options |
|  | Timer |  | Shift + AV |
|  | Sleep |  | Sleep |

