

 

 






 





 




 
 
 

 

 
















 








Originalfernbedienung Ersatzfernbedienung

	On/Eco		Power
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Play		Play
	Pause		Pause
	>>I		>>I
	I<<		I<<
	Record		Rec
	Disc Skip		Options
	CD		1
	EQ		2
	Tuner		3
	B.Boost		4
	Tape		5
	Open-Close		Eject
	AUX		6

Originalfernbedienung Ersatzfernbedienung

	Repeat/RDS		Text
	PTY		Guide
	Sleep		Sleep
	FM-ST		Pre Ch
	Intro/CT		Ok
	Mute		Mute
	Folder/Preset Up		Ch +
	Folder/Preset		Ch -

