







 

 



 





 

















Originalfernbedienung Ersatzfernbedienung



 





 

 
 
 




 
 
	On - Off		Power
	1		1
	2		2
	3		3
	Open - Close		Eject / Surround
	4		4
	5		5
	6		6
	Play Mode		Shift + Play /
	7		7
	8		8
	9		9
	Edit		Text / Goto
	AV		AV / Input / RDS
	0		0
	TV / DVD		TV/Radio /
	Setup		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Clear / Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Left		Left
	Up		Up
	OK		OK
	Right		Right
	Down		Down
	Live		Display / Media
	Naviclick		Smart / List
	Info		Info / Angle
	Advance		D.Menu / Top
	PR + / >>I		>>I / Preset+
	PR + / >>I		Shift + >>I / Preset+
	Again - Return		Back / Return
	PR - / I<<<		Shift + I<<< / Preset-
	PR - / I<<<		I<<< / Preset-
	<<< REV		<<< / Tune-




Originalfernbedienung Ersatzfernbedienung

























 

	Play		Play / Slow
	>> FWD		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Audio		Audio / Lang I/II
	Angle	 + 	Shift + Info / Angle
	Zoom / Video Out		Zoom / Size
	Subtitle		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

Back		Back / Return
Red/[o]		Red / Netflix / Search
Green/Timer/List		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue[]		Blue / Prime Video / Random
Text		Text / Goto
SP/LP		Setup / OPT /
Mark		Fav / Marker / PC
		1
		2
		3
		4
		5
		6
		7
		8
		9

Originalfernbedienung Ersatzfernbedienung

	AV		AV / Input / RDS
	0/-/--		Guide / EPG / -/--
	0000		0
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Left/Zoom-		Left
	Up		Up
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol+
	PR+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-
	PR-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

