



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display	+	Shift + Info
	V-Mode		Format
	Open / Close		Eject
	Language		Dual
	Step	+	Shift + Stop
	Slow	+	Shift + Pause
	Repeat		Text
	Angle		TV/R
	Resume		List
	A-B	+	Shift + Text
	Return		Back
	Subt / CD Ripping		Subt
	DVD / USB		Media
	Time		AV
	Zoom	+	Shift + Eject
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Title		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Setup		Options
	PBC		Smart
	P / N		D. Menu
	Pause		Pause
	Play		Play
	Vol +		Vol +
	Vol -		Vol -
	Prog		Sleep
	L / R	+	Shift + Dual
	Stop		Stop
	1		1





	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	2	<b>2</b>		
	3	<b>3</b>		
	4	<b>4</b>		
	5	<b>5</b>		
	6	<b>6</b>		
	7	<b>7</b>		
	8	<b>8</b>		
	9	<b>9</b>		
	0 / 10	<b>0</b>		
	10+	<b>GUIDE</b>		
	MUTE	<b>MUTE</b>		
	<< Rev	<b>&lt;&lt;</b>		
	Fwd >>	<b>&gt;&gt;</b>		
	I<< Prev	<b>⏮</b>		
	Next >>I	<b>⏭</b>		

