


 
 

 

 

 
 
 

 
 
 
 
 




 

 


 
 
 
 



 
 
 

 

 

 
 





 


 
 

 


 



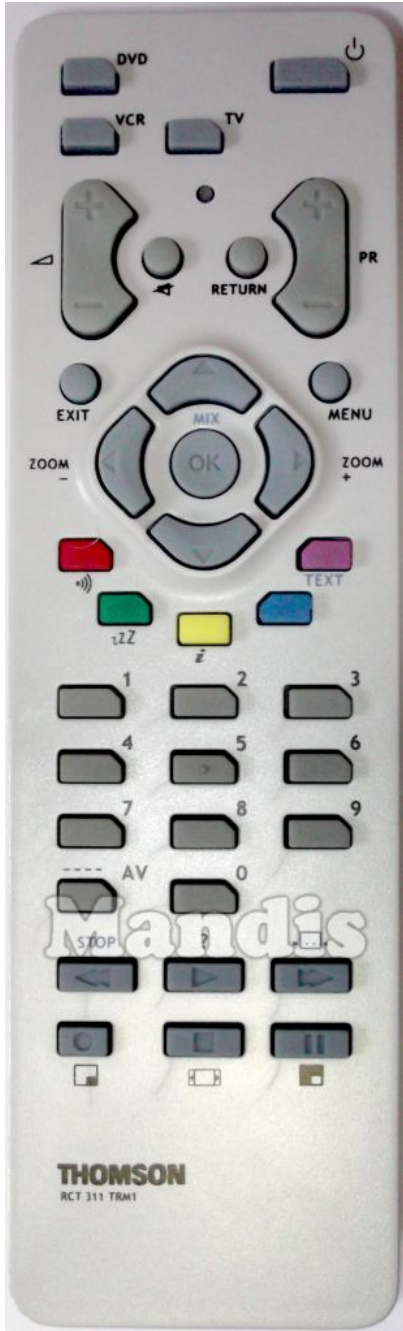 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-------|
|  | Power |  | Power |
|  | DVD |  | Smart |
|  | VCR |  | Media |
|  | TV |  | TV/R |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Return |  | Back |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Exit |  | Exit |
|  | Menu |  | Menu |
|  | Up |  | Up |
|  | Left / Zoom- |  | Left |
|  | OK / Mix |  | Ok |
|  | Right / Zoom+ |  | Right |
|  | Down |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | Red / ●))) |  | Red |
|  | Green / zZZ |  | Green |
|  | Yellow / i |  | Yellow |
|  | Blue |  | Blue |
|  | Purple / Text |  | Text |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | ---- AV |  | Guide |
|  | ---- AV |  | AV |





 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-------|
| | Power | | Power |
| | DVD | | Smart |
| | VCR | | Media |
| | TV | | TV/R |
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | Mute | | Mute |
| | Return | | Back |
| | PR+ | | Ch + |
| | PR- | | Ch - |
| | Exit | | Exit |
| | Menu | | Menu |
| | Up | | Up |
| | Left | | Left |
| | Zoom- | | I<< |
| | OK | | Ok |
| | Right | | Right |


 
 
 
 
 
 
 
 

 


 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|--------|
| | Zoom+ | | >>I |
| | Down | | Down |
| | Red | | Red |
| | Green | | Green |
| | zZZ | | List |
| | Info | | Info |
| | Yellow | | Yellow |
| | Blue | | Blue |
| | Purple / Text | | Text |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |

 
 
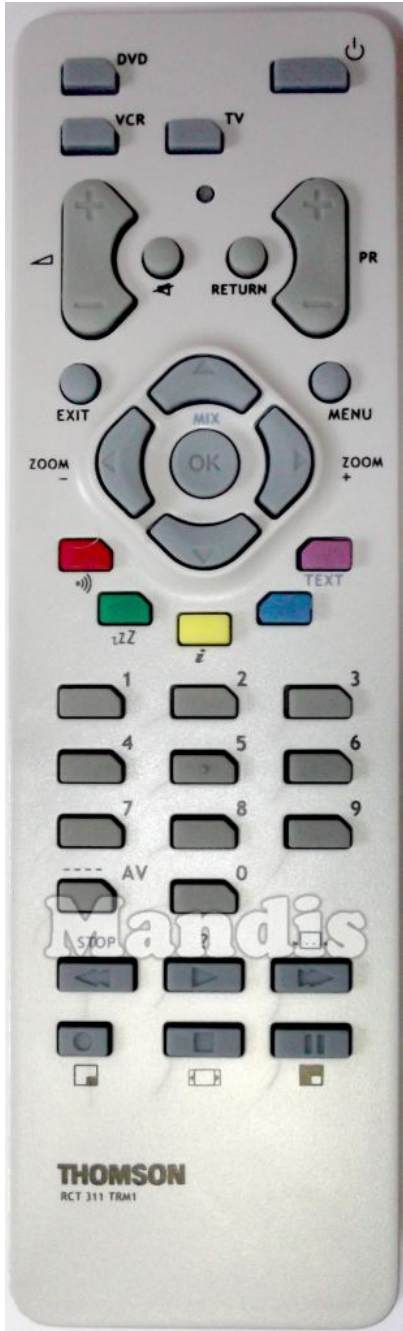 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Power |  | Power |
|  | DVD |  | Smart |
|  | VCR |  | Media |
|  | TV |  | TV/R |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Return |  | Back |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Exit |  | Exit |
|  | Menu |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Zoom- |  | I<< |
|  | OK |  | Ok |
|  | Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | Zoom+ |  | >>I |
|  | Down |  | Down |
|  | Red |  | Red |
|  | Green |  | Green |
|  | zZZ |  | List |
|  | Info |  | Info |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Purple / Text |  | Text |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |



