

 






 
 


 


 

 

 



 


 











Originalfernbedienung Ersatzfernbedienung




 


 




| | | | |
|---|----------|---|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Subtitle |  | Subt |
|  | Teletext |  | Text |
|  | Info |  | Info |
|  | Recall |  | Back |
|  | Up |  | Up |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | FAV |  | Pre Ch |
|  | EPG |  | Guide |
|  | Play List |  | Smart |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | Mute |  | Mute |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|------------------|
|  | << |  | << |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | I< |  | I<< |
|  | Stop |  | Stop |
|  | Rec |  | Rec |
|  | > |  | >> |
|  | Page Up |  | Shift + Ch + |
|  | Page Down |  | Shift + Ch - |
|  | TV/Radio / Source |  | TV/R |
|  | TV/Radio / Source |  | AV |
|  | Resolution |  | Format |
|  | ✓ |  | Shift + Ok |
|  | PIP |  | Shift + Down |
|  | PIP Swap |  | Shift + Left |
|  | PIP List |  | Shift + Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

