













 


 
 
 
 






 



 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	FAV		Pre Ch
	P.Mode		Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Display		Info
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Guide		Guide
	Media		Media
	CH+		Ch +
	CH-		Ch -
	Rec		Rec




Originalfernbedienung Ersatzfernbedienung

T.SHIFT	T.Shift	SETTINGS OPT	Options
AUDIO I/II	I/II/Audio	SOUND DUAL	Dual
ASPECT SIZE	Size/Aspect	ECO 3D	3D
TEXT	Text	REPEAT TEXT	Text
REVEAL	Reveal	HOME SMART	Smart
HOLD	Hold	E-MANUAL D.MENU	D. Menu
SUBPAGE	Subpage	ZOOM ▲	Eject
▶	Play	PLAY MODE ▶	Play
⏸	Pause	⏸	Pause
■	Stop	■	Stop
⏪	<<	⏪	<<
⏩	>>	⏩	>>
⏮	I<<	⏮	I<<
MIX ▶▶	>>I/Mix	▶▶	>>I
RECLIST INDEX	Index/Reclist	DISC NAV LIST	List
SUBTITLE	Subtitle	AD SUBT	Subt
■	Red	A	Red

Originalfernbedienung Ersatzfernbedienung

■	Green	B	Green
■	Yellow	C	Yellow
■	Blue	D	Blue

