
 



Originalfernbedienung Ersatzfernbedienung

Power ON/Off		Power
Mute		Mute
Every Pop		Smart
Tape 1 Preset		List
Vol Rs-/Effect		Ch -
Sleep		Sleep
Vol Rs+/S.Mode		Ch +
Tape 1 Stop	 + 	Shift + Stop
Volume+		Vol +
Volume-		Vol -
CD Rewind		<<
CD F.FWD		>>
CD Play		Play
Program	 + 	Shift + Sleep
Tape 1 Rec	 + 	Shift + Rec
Tape 1 Rew	 + 	Shift + <<
Tape 1 F.FWD	 + 	Shift + >>

Originalfernbedienung Ersatzfernbedienung

Tape 1 Play	 + 	Shift + Play
CD Pause		Pause

