



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|---|---------------------------|
| | Power | | Power |
| | Top Menu | + | Shift + D.Menu / Top Menu |
| | DVD Menu | | D.Menu / Top |
| | Tv/DVD | | TV/Radio / |
| | Open/Close | | Eject / Surround |
| | TV | + | Shift + Down |
| | O)I/II | | Display / Media |
| | Subtitle | | Subtitle / EQ |
| | Text/Angle | | Text / Goto |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|---|-------------------------------|
| | 9 | | 9 |
| | AD | | Audio / Lang I/II |
| | 0 | | 0 |
| | ATV/DTV | + | Shift + AV / Input / RDS |
| | Guide | | Guide / EPG / -/- |
| | Input | | AV / Input / RDS |
| | Menu | | Menu / Home |
| | Quick | + | Shift + Exit / Cancel / Clear |
| | Up | | Up |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Down | | Down |
| | Exit | | Exit / Cancel / Clear |
| | Jump | | Smart / List |
| | Return | | Back / Return |
| | Setup | | Setup / OPT / |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|-----------------------------|
| | P+ | | CH+ / Page+ |
| | [≡i]/[≡+] | | Info / Angle |
| | Vol+ | | Vol+ |
| | P- | | CH- / Page- |
| | Mute | | Mute / Dimmer |
| | Vol- | | Vol- |
| | Pause | | Pause / Step / Freeze |
| | I<</[≡?] | | I<< / Preset- |
| | >>I[O]/[≡x] | | >>I / Preset+ |
| | <</[≡+] | | << / Tune- |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |
| | >>/[≡◇] | | >> / Tune+ |
| | Red/Zoom | | Red / Netflix / Search |
| | Green/Repeat | | Green / APP / Repeat |
| | Yellow/Root | | Yellow / YouTube / Repeat |
| | Blue/Title | | Blue / Prime Video / Random |

