



 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------------------|
|  | Input |  | AV / Input / RDS |
|  | Power |  | Power |
|  | [▼] |  | Fav / Marker / PC |
|  | Text |  | Text / Goto |
|  | Subtitle |  | Subtitle / EQ |
|  | O)/I/II |  | Audio / Lang I/II |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | AD |  | Sound / Title |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------|
|  | ATV/DTV |  | TV/Radio / |
|  | Vol+ |  | Vol+ |
|  | [≡i]/[i+] |  | Info / Angle |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | PR- |  | CH- / Page- |
|  | Quick |  | Smart / List |
|  | Guide |  | Guide / EPG / -/- |
|  | Up |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Return |  | Back / Return |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|-----------------------------|
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | [≡?] | | Display / Media |
| | [≡+] | | Stop / Hold |
| | [≡◇] | | Zoom / Size |
| | Timer/[≡x] | | Sleep / Timer |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

