

























 

 









Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Input Select		AV / Input / RDS
	HDMI		Shift + 0
	Standby		Power
	1		1
	2		2
	3		3
	Prog+		CH+ / Page+
	4		4
	5		5
	6		6
	Prog-		CH- / Page-
	7		7
	8		8
	9		9
	Timer Prog		Sleep / Timer
	Setup		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	[i+]/Info		Info / Angle
	Text		Text / Goto
	Variable Replay		Vol+
	Variable Skip		Vol-
	Guide		Guide / EPG / -/--
	Top Menu		D.Menu / Top
	Disc Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search

 

 
 
 









Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow/Mode		Yellow / YouTube / Repeat
	Blue/Search		Blue / Prime Video / Random
	Blue/Search		Shift + Red / Netflix /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	VCR		Shift + 4
	HDD		Shift + 7
	DVD		Shift + 2
	Time Slip		TV/Radio /
	Dubbing		Picture / Format
	Rec Mode		Shift + Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ
	1.3x/0.8x PLayer		Shift + Play /
	O)/Audio		Audio / Lang I/II
	Sat Link		Smart / List

