

 


 
 


 



 



 
 
 
 






 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	Mute		Mute
	[i+]		Info
	P+		Ch +
	P-		Ch -

 
 
 

 
 








 
 

 

 


 

 
 
 
Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Home		Smart
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Text		Text
	Netflix		Media
	Search		TV/R
	FPlay		List
	3D		3D
	Timer		Shift + AV





Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	[<>]		Format
	Quick		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	YouTube		Sleep

Originalfernbedienung Ersatzfernbedienung

