
 




**Originalfernbedienung    Ersatzfernbedienung**

	Open/Close		Eject / Surround
	Power		Power
	Tv/VCR		AV / Input / RDS
	VCR		Shift + 4
	DVD		Shift + 2
	Clock Counter		Info / Angle
	Program		TV/Radio /
	One Touch		Green / APP / Repeat
	Instant Skip		Text / Goto
	Setup/VCR		Setup / OPT /
	Zoom		Zoom / Size
	I> Slow		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	CH+		CH+ / Page+
	DVD Menu		Menu / Home
	Left/Set-		Left

**Originalfernbedienung    Ersatzfernbedienung**

	Enter		OK
	Right/Set+		Right
	Clear/Cancel		Exit / Cancel / Clear
	CH-		CH- / Page-
	Down		Down
	Return		Back / Return
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	I<< Skip/Index-		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	Skip		>>I / Preset+
	Rec/OTR		Rec / Rec Mode
	Timer Rec		Sleep / Timer
	Play		Red / Netflix / Search
	A-B RPT		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
CALL DISPLAY	Display/Call	MEDIA DISPLAY	Display / Media
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
ZERO RETURN JUMP	Jump/Zero Return	GUIDE EPG	Guide / EPG / -/--
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
AUX	0/AUX	HDMI - BAT	0
COUNTER RESET ANGLE	Camera/Angle/Counter Reset	FORMAT PICTURE	Picture / Format
ATR SUBTITLE	[...]/Subtitle/ATR	EQ SUBTITLE	Subtitle / EQ
AUDIO SELECT AUDIO	0)/Audio/Audio Select	LANG I/II AUDIO	Audio / Lang I/II
MARKER	Marker	PC FAV MARKER	Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung