



 
 





 

 

 









 

 

 


 




 
 
 




 
 



 



 


 

 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	TXT		Text
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Home		Smart
	P+		Ch +
	P-		Ch -
	[i+]		Info
	Guide		Guide
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Prime Video		Shift + Smart





Originalfernbedienung Ersatzfernbedienung

 Netflix	 Media
 You Tube	 Shift + Media
 <<	 <<
 Pause	 Pause
 >>	 >>
 Rec	 Rec
 Play	 Play
 Stop	 Stop

Originalfernbedienung Ersatzfernbedienung

