


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt
	Angle		AV
	T/Search (Jump)		TV/R

Originalfernbedienung Ersatzfernbedienung

	A-B RPT		3D
	Marker		Text
	Top Menu		Shift + Menu
	Menu		Menu
	Return		Back
	Play Mode		Shift + Play
	<I Slow		Ch -
	Zoom		Shift + Eject
	Slow I>		Ch +
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	>>I		>>I
	I<<		I<<
	Setup		Options



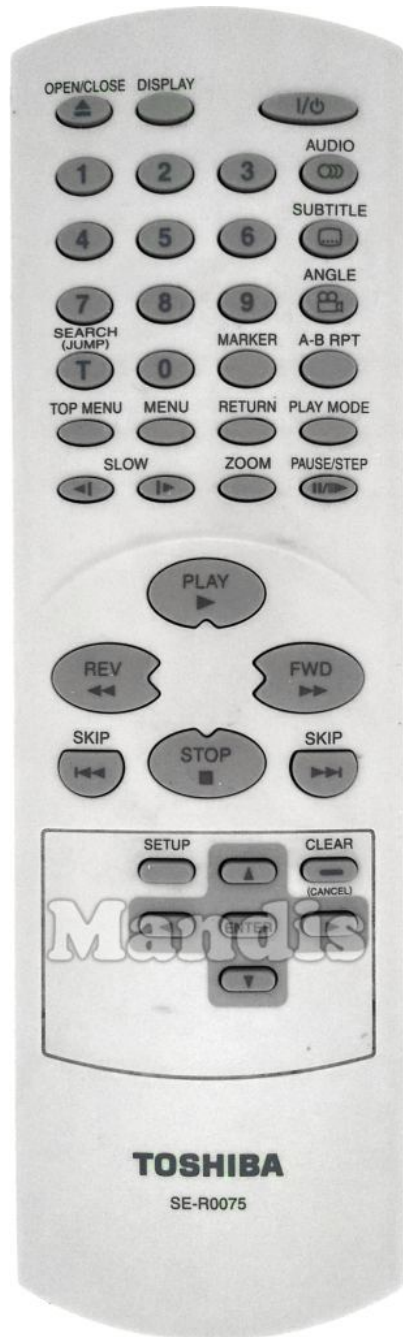

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Clear/(Cancel)	 Exit		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		

