









 





 

 






 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Lang |  | Audio / Lang I/II |
|  | 0 |  | 0 |
|  | [≡]... |  | Subtitle / EQ |
|  | Home |  | Shift + Menu / |
|  | Home |  | D.Menu / Top |
|  | V+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|----------------------------|
|  | P+ |  | CH+ / Page+ |
|  | V- |  | Vol- |
|  | Source |  | AV / Input / RDS |
|  | P- |  | CH- / Page- |
|  | [G] |  | Guide / EPG / -/- |
|  | i |  | Info / Angle |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | ← |  | Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Netflix |  | Shift + Red / Netflix / |
|  | YouTube |  | Shift + Yellow / YouTube / |
|  | Menu |  | Menu / Home |
|  | *1 |  | Picture / Format |



