 



 





 

 






 
 


 

 
 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Tv/Disc		TV/R
	ATV/DTV		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AD		Shift + Subt
	Input		AV
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Quick		Pre Ch
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Pop Up Menu		D. Menu
	Top Menu		Shift + Menu
	Guide/Disc		Guide
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu/Set Up		Menu
	Return		Back
	Pause		Pause

 


 
 





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	I<< Skip		I<<
	<< Rev		<<
	>> FF		>>
	Skip >>I (Slow)		>>I
	Red/Program		Red
	Green/Digest		Green
	Yellow/Zoom		Yellow
	Blue/Book Mark		Blue
	[≡?]		Media
	[≡+]		Format
	[≡◆]		3D
	[≡o]/[≡x]		Sleep
	[▼]		Options
	Text		Text
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	O)/		Dual
	[≡i]/[i+]		Info
	Angle		Rec

