
 


 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | << |  | << |
|  | >> |  | >> |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Pause/Step |  | Pause |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Top Menu |  | Shift + Menu |
|  | Menu |  | Menu |
|  | Clear |  | Exit |
|  | Return |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Enter |  | Ok |
|  | Camera/Angle |  | Red |
|  | [...]/Subtitle |  | Subt |
|  | O)))/Audio |  | Dual |
|  | Setup |  | Options |
|  | Display |  | Info |
|  | Zoom |  | Shift + Eject |
|  | I>/Slow |  | Format |
|  | E.A.M. |  | D. Menu |
|  | E.P.M. |  | AV |
|  | F.L.Select |  | 3D |
|  | F.L.Dim |  | Yellow |
|  | T/Search |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|-----------------------|---------|---------------------|-------|-----------------------|--|---------------------|--|
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | 0 | | 0 | | | | |
| | +10 | | Guide | | | | |
| | Random | | Media | | | | |
| | Memory | | Blue | | | | |
| | Repeat | | Text | | | | |
| | A-B RPT | | Green | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

