 





 

 







 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject
	Input Select		AV
	HDMI		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Options
	Clear		Exit
	Prog+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Prog-		Ch -
	Timer Prog		Sleep
	Variable Replay		Pre Ch
	Variable Skip		Shift + Pre Ch
	Top Menu		Menu
	Disc Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Shift + Back
	Mode		Yellow
	Search		Blue
	<<		<<
	Play		Play





Originalfernbedienung Ersatzfernbedienung

FWD	>>	>>	>>
SKIP	<<	<<	<<
STOP	Stop	■	Stop
SKIP	>>	>>	>>
PAUSE	Pause		Pause
VCR	VCR	SHIFT + 1	Shift + 1
HDD	HDD	SHIFT + 2	Shift + 2
DVD	DVD	SHIFT + 3	Shift + 3
TIME SLIP	Time Slip	SHIFT + PROG SLEEP	Shift + Sleep
DUBBING	Dubbing	RETURN BACK	Back
REC MODE	Rec Mode	SHIFT + REC MODE	Shift + Rec
REC	Rec	REC MODE	Rec
SUBTITLE	Subtitle	AD SUBT	Subt
1.3x/0.8x PPlay	1.3x/0.8x PPlay	PICTURE FORMAT	Format
AUDIO	O)/Audio	SOUND DUAL	Dual
SAT.LINK	Sat Link	ECO 3D	3D

Originalfernbedienung Ersatzfernbedienung

