





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Dimmer		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<< Picture		<< / Tune-
	Picture Search		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	FL Select		Sound / Title
	DVD Audio		Audio / Lang I/I
	DVD Subtitle		Subtitle / EQ
	Open / Close		Eject / Surround
	P in P		Picture / Format
	Zoom		Zoom / Size
	Timesleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Progressive		TV/Radio /
	DVD Menu		D.Menu / Top
	Rec Menu		Setup / OPT /
	CHP Divide		Text / Goto
	Input Select		AV / Input / RDS
	Content Menu		Menu / Home
	Up		Up
	DVD Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	DVD Return		Back / Return
	Instant Skip		Vol+
	Easy Navi		Smart / List
	Channel+		CH+ / Page+





Originalfernbedienung	Ersatzfernbedienung
Instant Replay	Vol-
Library	Display / Media
Channel-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0
Remain	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Originalfernbedienung	Ersatzfernbedienung
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec Mode	Shift + Rec / Rec Mode
<I Slow	Shift + << /
Slow I>	Shift + >> /
II< Frame/Adjust	Shift + I<< / Preset-
Frame/Adjust >II	Shift + >>I / Preset+
Time Bar	Shift + Sleep / Timer
Top Menu	Shift + D.Menu / Top Menu
Setup	Shift + Setup / OPT / Tools
Edit Menu	Shift + Menu /
Delete	Shift + Exit / Cancel / Clear
Display	Shift + Display / Media
DVD	Shift + 2
HDD	Shift + 7
T.Search	Shift + Red / Netflix /

