


 


 
 





 

 









 





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	TV/Video		AV / Input / RDS
	Counter Reset		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	Prog +		CH+ / Page+
	4		4
	5		5
	6		6
	Prog -		CH- / Page-
	7		7
	8		8
	9		9
	Display		Display / Media
	0		0
	Rec		Rec / Rec Mode





Originalfernbedienung    Ersatzfernbedienung

	Timer Rec		Sleep / Timer
	Slow		Shift + Play /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	SP/LP		Sound / Title
	A.Select		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	PR+		CH+ / Page+
	4		4
	5		5
	6		6
	PR-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	0		0
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung