




















 






 

 




 

 
 
 


 






Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Home		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	[i+]		Info / Angle
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Prime Video		Shift + Blue / Prime Video / Random



