













 

 

 

 

 










 




Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Eject		Eject / Surround
	On/Standby		Power
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	TRK Up		Vol+
	I.Select		Yellow / YouTube / Repeat
	0		0























Originalfernbedienung Ersatzfernbedienung

	Count.RST		Red / Netflix / Search
	TRK Down		Vol-
	F.ADV		Text / Goto
	Index		Info / Angle
	Count.TR		Green / APP / Repeat
	CLR/RST		Exit / Cancel / Clear
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	Timer Rec		Sleep / Timer
	Play/Up		Play / Slow
	Play/Up		Up
	<</Left		Left
	<</Left		<< / Tune-
	>>/Right		Right
	>>/Right		>> / Tune+
	I>/Slow		Shift + Play /
	Stop/Down		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	Stop/Down		Down
	Pause/Still/OK		Pause / Step / Freeze
	Pause/Still/OK		OK
	SP/LP		Setup / OPT /
	Prog.		TV/Radio /
	Audio		Audio / Lang I/II
	Tv/Video		Smart / List
	A.Dub		Sound / Title
	SAT/Moni.		D.Menu / Top
	Cont.Sat.		Zoom / Size
	Picture		Picture / Format

Originalfernbedienung Ersatzfernbedienung

