


Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Eject		Eject / Surround
	On / Standby		Power
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	TRK+		Vol+
	I.Select		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	Count.Rst.		Back / Return
	TRK-		Vol-
	F.Adv		>>I / Preset+
	Index-		Down
	Index+		Up
	Count/TR		Text / Goto
	Annul.		Exit / Cancel / Clear
	Menu		Menu / Home
	ENR.		Rec / Rec Mode
	Timer		Sleep / Timer
	Play		Play / Slow
	<< Rew		<< / Tune-
	>> FF		>> / Tune+
	I> Slow		Shift + Play /
	Stop		Stop / Hold
	Pause / Still		Pause / Step / Freeze
	SP/LP		Picture / Format



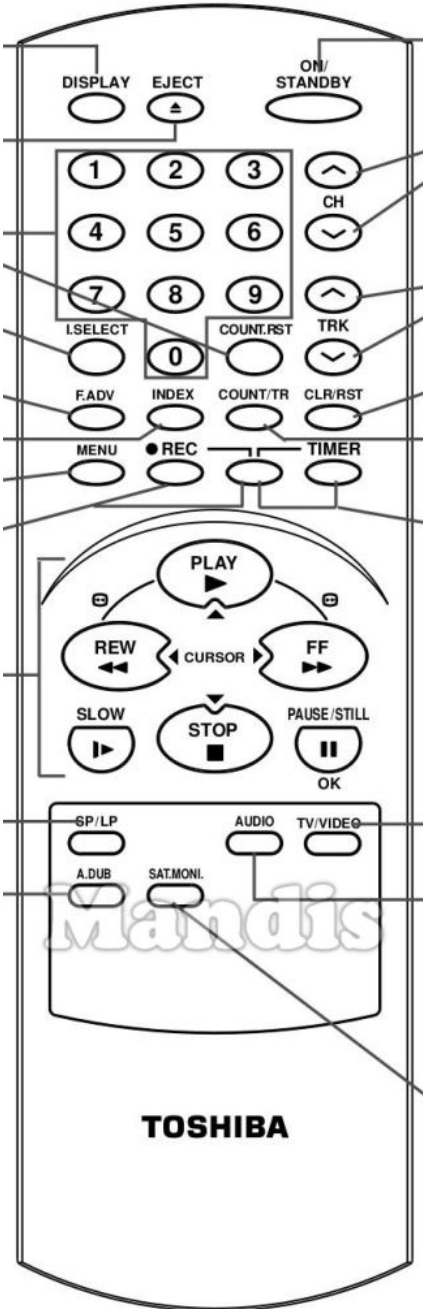

Originalfernbedienung Ersatzfernbedienung

	Audio		Audio / Lang I/II
	TV/Video		TV/Radio /
	A.Dub		Sound / Title
	Sat. Moni.		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

