


 














 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------|
|  | Tv/Video |  | TV/Radio / |
|  | I.Select |  | Smart / List |
|  | On/Standby |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | CH/TRK+ |  | CH+ / Page+ |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | CH/TRK- |  | CH- / Page- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | → |  | Right |
|  | Display |  | Display / Media |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-----------------------------|
|  | OSP |  | Info / Angle |
|  | ← |  | Left |
|  | Rec |  | Rec / Rec Mode |
|  | Timer |  | Sleep / Timer |
|  | Cancel |  | Exit / Cancel / Clear |
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | I>/Slow |  | Shift + Play / |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | Index- |  | Down |
|  | Index+ |  | Up |
|  | C.Reset |  | Back / Return |
|  | Counter |  | Zoom / Size |
|  | SP/LP |  | Picture / Format |
| | A3 |  | Blue / Prime Video / Random |



