












Originalfernbedienung Ersatzfernbedienung

	STANDBY		Power
	MUTE		Mute / Dimmer
	DTV		Shift + Display / Media
	PC		Shift + Fav / Marker / PC
	AUDIO I/II		Audio / Lang I/II
	SLEEP		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		9
	9		8
	0		0
	RECALL		Back / Return

Originalfernbedienung Ersatzfernbedienung

	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	TEXT		Text / Goto
	DISPLAY		Display / Media
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	VOL -		Vol-
	VOL +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat
	BLUE		Blue / Prime Video / Random



