









 


 








 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	TV/R		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Up		Up
	CH+		CH+ / Page+
	Down		Down
	CH-		CH- / Page-
	Left		Left
	Vol-		Vol-
	Vol+		Vol+
	Right		Right
	OK		OK
	Info		Info / Angle
	Mute		Mute / Dimmer
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ





Power DIMMER MUTE SHIFT

TV DVD SAT AUX

SLOW STEP - FREEZE HOLD REC MODE

Play Pause Stop

TUNE- TUNE+ PRESET- PRESET+

Fast Reverse Fast Forward

TITLE LANG UI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/ RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

CLEAR RETURN

EXIT BACK

CANCEL LIST

+ VOL SMART +

- CH

TV DVD CD - STB

1 2 3

VIDEO TAPE

4 5 6

AUX - HDD USB BLUETOOTH

7 8 9

PC

GUIDE HDMI - SAT FAV

EPO 0 MARKER

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv