



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P-		Shift + CH- /
	P-		I<< / Preset-
	0 / Sleep		Shift + Sleep / Timer
	0 / Sleep		0
	P+		Shift + CH+ /
	P+		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II
	List		Smart / List
	Vol+		Vol+
	M/P		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	TV/Radio		TV/Radio /
	CH-		CH- / Page-
	Text		Text / Goto
	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK



