 

 



 







 



 



 

 



 

 




 




 

 

 






**Originalfernbedienung    Ersatzfernbedienung**

	DVD/USB		Shift + Display / Media
	Menu/PBC		Menu / Home
	Display		Display / Media
	Mute		Mute / Dimmer
	P/N		Guide / EPG / -/--
	L/R		Shift + Fav / Marker / PC
	Angle		Info / Angle
	Language		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Title		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	0		0
	Setup		Setup / OPT /
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Play		Play / Slow
	Slow		Shift + Play /
	Vol-		Vol-
	Stop		Stop / Hold
	Vol+		Vol+
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-



