

 
















 
 
 

 





 







 










Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 AV-Out	 AV
 Photo	 Red
 Music	 Green
 Movie	 Yellow
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Setup	 Options
 Exit	 Exit
 Calendar	 Smart
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I

Originalfernbedienung	Ersatzfernbedienung
 <<	 <<
 >>	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

