



Originalfernbedienung	Ersatzfernbedienung		
	Power		Power
	Mute		Mute / Dimmer
	Play/Pause		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pic		Picture / Format
	Zoom		Zoom / Size
	Input		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Esc		Exit / Cancel / Clear

Originalfernbedienung	Ersatzfernbedienung		
	Down		Down
	Vol+		Vol+
	Turn		Smart / List
	Vol-		Vol-
	Repeat		Green / APP / Repeat

