



Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Mode		Picture / Format
	Repe		Green / APP / Repeat
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Scan		Smart / List
	I<<		I<< / Preset-
	CH-		CH- / Page-
	CH+		CH+ / Page+
	>>I		>>I / Preset+
	EQ		Subtitle / EQ
	Vol-		Vol-
	Vol+		Vol+
	0		0
	WAV		Display / Media
	Reco		Fav / Marker / PC
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

