






 

 










 



 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[::]		D.Menu / Top
	Netflix		Red / Netflix / Search
	prime video		Blue / Prime Video / Random
	You Tube		Yellow / YouTube / Repeat
	Google Play		Green / APP / Repeat
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Guía		Guide / EPG / -/--
	Up		Up
	TV		TV/Radio /
	Left		Left
	OK		OK
	Right		Right



 



Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Vol+		Vol+
	Smart		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung   Ersatzfernbedienung

	Mute		Mute / Dimmer
	0		0
	(>)		Fav / Marker / PC

Originalfernbedienung   Ersatzfernbedienung