


 






 

 

 







 











 



 

 

 

 

 



 





 














**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Still		Shift + Pause / Step /
	I/II		Audio / Lang I/II
	Power		Power
	Scan		Smart / List
	Sleep		Sleep / Timer
	PIP		Picture / Format
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	TV/AV		AV / Input / RDS
	0		0
	Swap		Back / Return
	P.STD		Setup / OPT /
	S.STD		Sound / Title
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	Menu		Menu / Home
	OK		OK
	Right		Right
	Vol+		Vol+
	CH-		CH- / Page-
	Down		Down
	[=]		Text / Goto
	[+]		Subtitle / EQ





**Originalfernbedienung Ersatzfernbedienung**

	[ /= ]		TV/Radio /
	<</[...]		<< / Tune-
	>>/[?]		>> / Tune+
	[X]		Fav / Marker / PC
	Red/↑		Red / Netflix / Search
	Green/←		Green / APP / Repeat
	Yellow/→		Yellow / YouTube / Repeat
	Blue/Enter/H.Lock		Blue / Prime Video / Random
	White/↓/CH.List		Guide / EPG / -/--
	Pause/Timer		Pause / Step / Freeze
	[♦]/Zoom		Zoom / Size
	Exit		Exit / Cancel / Clear

**Originalfernbedienung Ersatzfernbedienung**