 
 
 


 











 






 
 

 

 



 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	System		Media
	Mute		Mute
	Sleep		Sleep
	Recall		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	S.Mode		Dual
	Call		Back
	P.Mode		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	TXT/TV		Text
	Mix		Subt
	Sub/Nicam		Smart
	Hold		Options
	Reveal		TV/R





Originalfernbedienung Ersatzfernbedienung

	Index		Info
	Size		Format
	Cancel		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue

Originalfernbedienung Ersatzfernbedienung