







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	FAV		Fav / Marker / PC
	Internet		Smart / List
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Music/Movie/Pictu		Display / Media
	LIB		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	P↔P		I<< / Preset-
	EPG		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Back		Back / Return
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Rec		Rec / Rec Mode
	Play		Play / Slow



