



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PgUp		Ch +
	PgDn		Ch -
	FAV+		>>I
	FAV-		I<<
	Up/CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	Audio		Dual
	SUB		Subt
	Zoom		Eject
	FAV		Pre Ch





Originalfernbedienung Ersatzfernbedienung

LIST	List	DISC NAV LIST	List
PAUSE	Pause	REPEAT	Pause
TXT	TXT	REPEAT TEXT	Text
INFO	Info	DISPLAY INFO	Info
TVRADIO	Tv/Radio	SEARCH TV/R	TV/R
RECALL	Recall	RETURN BACK	Back

Originalfernbedienung Ersatzfernbedienung

