









 







 




 


 






 
 




 







 
 
 




 

 



 


 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Return		Back
	TV/AV		AV
	Timer		Shift + AV
	Picture		Format
	Sound		Dual

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	UP/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Sys Menu		Menu
	Display		Shift + Info
	TV/TXT/Hold		Media
	Cancel/Size		3D
	Reveal		Eject
	Nicam/A2		Options
	Prog+		Ch +
	Prog-		Ch -
	Subpage		List



