



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prev		I<<
	Prev		Guide
	Next		>>I
	Next		Pre Ch
	Menu		Menu
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Audio		Dual
	PVR		Smart
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Volume+		Vol +
	Volume-		Vol -
	File List		List
	Mute		Mute
	Channel+		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Channel-		Ch -				
	<<		<<				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	>>		>>				
	www		Media				
	Subtitle		Subt				
	Timer		AV				
	Timer		Sleep				
	Rec		Rec				
	TV		TV/R				
	Radio		Shift + TV/R				
	Text		Text				
	Help		D. Menu				

