










 


 





 

 

 


 


 
 




 




 
 


 



 

 

 

 

 
 

 


 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio Lang. I/II		Dual
	Subtl		Subt
	EPG		Guide
	→ P ←		Format
	→ S ←		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Fav		Shift + Pre Ch
	Size		Eject
	Vol+		Vol +
	Vol-		Vol -
	CH+ / Page+		Ch +
	CH- / Page-		Ch -
	QV Top		Smart
	Source		AV
	Menu		Menu
	Q.Menu		D. Menu
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit




**Originalfernbedienung Ersatzfernbedienung**

	Red		Red
	FAV CH		Pre Ch
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text / Play/Pause		Text
	Text / Play/Pause		Play
	Text / Play/Pause		Pause
	Index / Repeat		Shift + Text
	Index / Repeat		Shift + Info
	Cancel / Time		Back
	Cancel / Time		Shift + AV
	Hold / Stop		Stop
	Mix / Prev		l<<
	Subpg / Next		>>l
	Reveal / F.Rev		<<
	CEC / F.Fwd		>>

**Originalfernbedienung Ersatzfernbedienung**

	CEC / F.Fwd		Media

