




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Prog		TV/Radio /
	Display		Display / Media
	Open/Close		Eject / Surround
	N/P		Smart / List
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Language		Audio / Lang I/II
	7		7
	8		8
	9		9
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	Time		Sleep / Timer
	Setup		Setup / OPT /
	Up		Up
	Repeat		Green / APP / Repeat
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Vol+		Vol+
	Return		Back / Return
	Zoom		Zoom / Size
	Mode		Picture / Format
	Step		Shift + Pause / Step / Step /
	L/R		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Resume		Red / Netflix / Search
	Slow		Shift + Play /
	Title		Sound / Title
	A-B		Yellow / YouTube / Repeat
	Menu		Menu / Home
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	<</Rev		<< / Tune-
	>>/Fwd		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

